

# ATCO Thermal-Link

XM Series I<sub>r</sub>: 3 A



### **Description**

Alloy Thermal-Link / Alloy Thermal Cutoff (ATCO) is defined as a non-resettable protective device functioning one time only. It is widely used in electrical equipment. ATCO is mainly consist of fusible alloy, flux resin, case, sealant and lead wires. Normally, fusible alloy is jointed to the two lead wires. Under abnormal conditions, when the temp. reaches to the fusing temp. of ATCO, the fusible alloy melts and quickly retracts to the two lead wire ends with the aid of the flux resin and disconnects the circuit completely.

#### **Features**

- Transparent Plastic Case
- Non-Resettable
- High Accuracy of Functioning Temp.
- Rated Voltage 300 VAC
- Lead Wires Insulated
- RoHS & REACH Compliant


### Customization

- Other Temp.
- The Length of Lead Wires
- Taping Packing Available
- Tinned Copper Wires or CP Wires

### **Applications**

- Lamps
- Switched-Mode Power Supplies
- Home Electrical Appliances
- Transformers
- Motors
- Batteries

### **Dimensions (mm)**

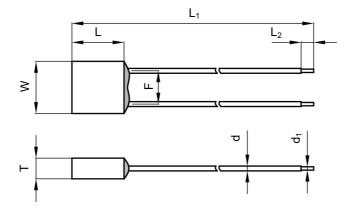

L	L <sub>1</sub>	L <sub>2</sub>	W	Т	d	d <sub>1</sub>	F
5.8 ± 0.5	70.0 ± 3.0	5.0 ± 1.0	5.8 ± 0.5	2.3 ± 0.2	0.8 ± 0.1	0.54 ± 0.05	3.7 ± 0.5







# **Agency Approvals**

Agency	Standards	File No.		
<b>91</b> °	UL 60691	E214712		
c <b>%</b>	CAN-CSA-E60691	E214712		
TOVRheinland	EN 60691	R50388884		

# **Structure Diagrams**

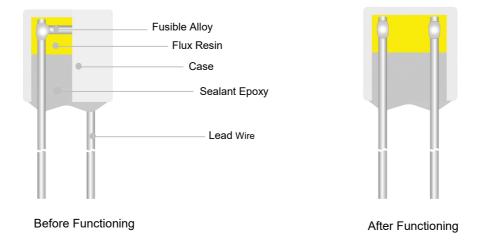


# Marking

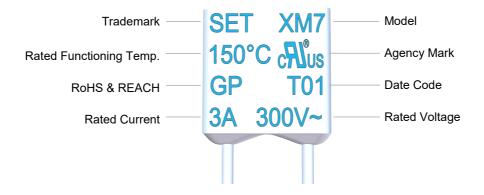




SETsafe | SET fuse

## **Part Numbering System**

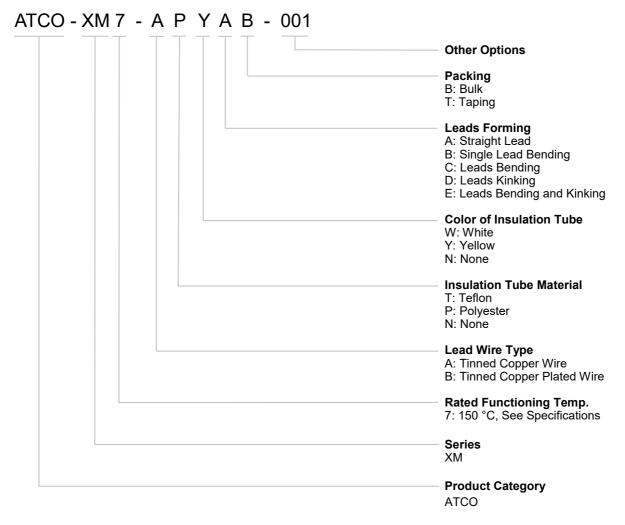

### **Leads Forming Types**

The below leads forming is for reference, more leads forming can be customized.

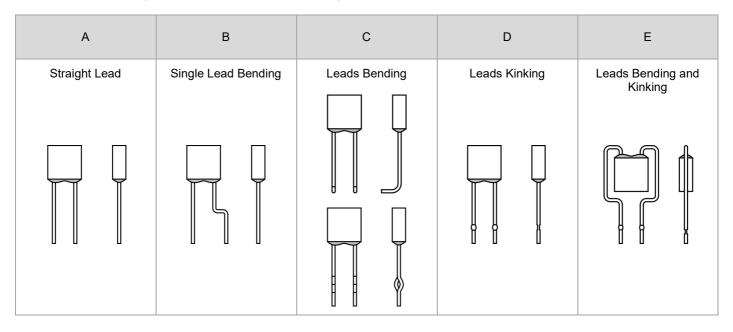





# **Glossary**

Item	Description
тсо	Thermal-Link A non-resettable device incorporating a THERMAL ELEMENT which will open a circuit once only when exposed for a sufficient length of time to a temperature in excess of that for which it has been designed.
ATCO	Alloy Thermal-Link Alloy Type Thermal-Link, Alloy is the thermal element.
T <sub>f</sub>	Rated Functioning Temp.  The temperature of the Alloy Thermal-Link which causes it to change the state of conductivity with a detection current up to 10 mA as the only load.  Tolerance: $T_f \stackrel{\circ}{_{-10}} ^{\circ} C$ (GB/T 9816, EN 60691, K60691).  Tolerance: $T_f \pm 7 ^{\circ} C$ (J60691).
Fusing Temp.	Fusing Temp.  The temperature of the Alloy Thermal-Link which causes it to change its state of conductivity is measured with silicone oil bath in which the temperature is increased at the rate of 0.5 °C to 1 °C / minute, with a detection current up to 10 mA as the only load.
T <sub>h</sub>	Holding Temp.  The Maximum temperature at which a Alloy Thermal-Link will not change its state of conductivity when conducting rated current for 168 hours.
T <sub>m</sub>	Maximum Temp. Limit The temperature of the Alloy Thermal-Link stated by the manufacturer, up to which the mechanical and electrical properties of the Alloy Thermal-Link having changed its state of conductivity, will not be impaired for a given time.
I <sub>r</sub>	Rated Current The current used to classify a Alloy Thermal-Link, which is the Maximum current that Alloy Thermal-Link allows to carry and is able to cut off the circuit safely.
U <sub>r</sub>	Rated Voltage The voltage used to classify a Alloy Thermal-Link, which is the Maximum voltage that Alloy Thermal-Link allows to carry and is able to cut off the circuit safely.
CP Wire	CP Wire Tinned Copper Plated Wire





XM Series I<sub>r</sub>: 3 A

# **Specifications**

Model	$T_{\mathrm{f}}$	Fusing Temp.	$T_{h}$	T <sub>m</sub>	I <sub>r</sub>	<b>U</b> r	<b>71</b> ®	° <b>71</b> 8°	TÜVRheinland	RoHS、 REACH
	(°C)	(°C)	(°C)	(°C)	(A)	(V)	UL	cUL	TUV	
XM4	130	125 ± 2	106	200	3	AC 300	•	•	•	•
XM5	135	130 ± 2	111	200	3	AC 300	•	•	•	•
XM7	150	145 ± 2	126	200	3	AC 300	•	•	•	•

#### Note:

<sup>&</sup>quot;●" Means certificated.


<sup>&</sup>quot;O" Means non-certificated.






# **Product Temp.-Time Curve (Reference)**

The Temp.-Time Curve of Thermal-Link in different temp. oil bath.

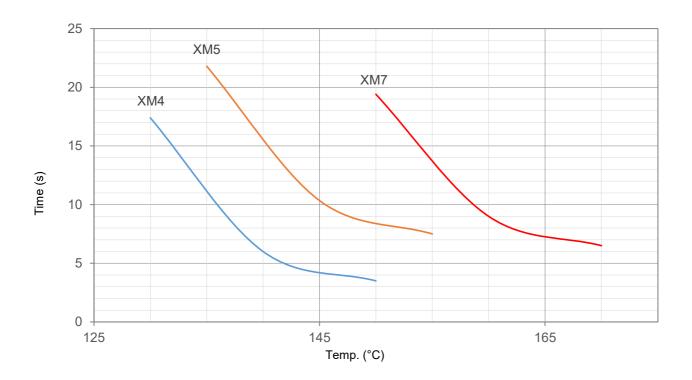

# **Product Current-Time Curve (Reference)**

The Current-Time Curve shows functioning time at multi-times rated current at room temperature 25 ± 2 °C.

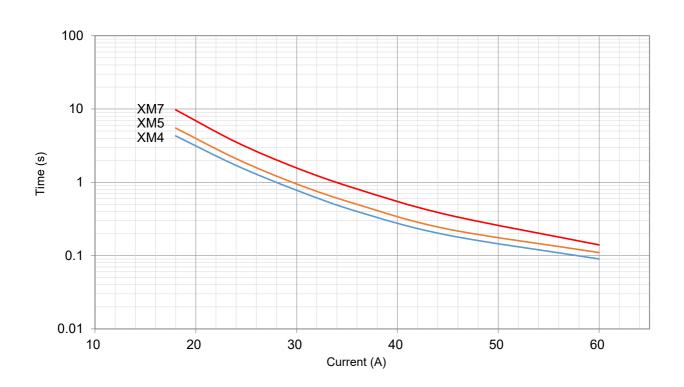






# **Packaging Information**

Bulk

Item	PE Bag	PE Bag	Carton
Dimensions (mm)	135 × 85	190 × 180	440 × 300 × 260
Quantity (PCS) 100		1000	50000
Gross Weight (kg)	21 ± 10%		

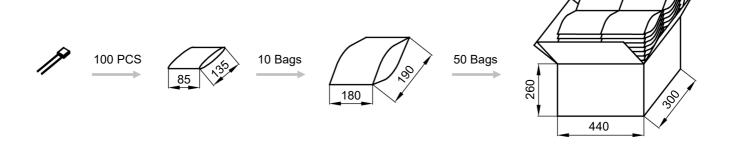




ATCO
Thermal-Link

XM Series I<sub>r</sub>: 3 A

#### Taping

Item	Вох	Carton
Dimensions (mm)	328 × 200 × 70	480 × 340 × 220
Quantity (PCS)	2000	12000
Gross Weight (kg)	6.5 ± 10%	

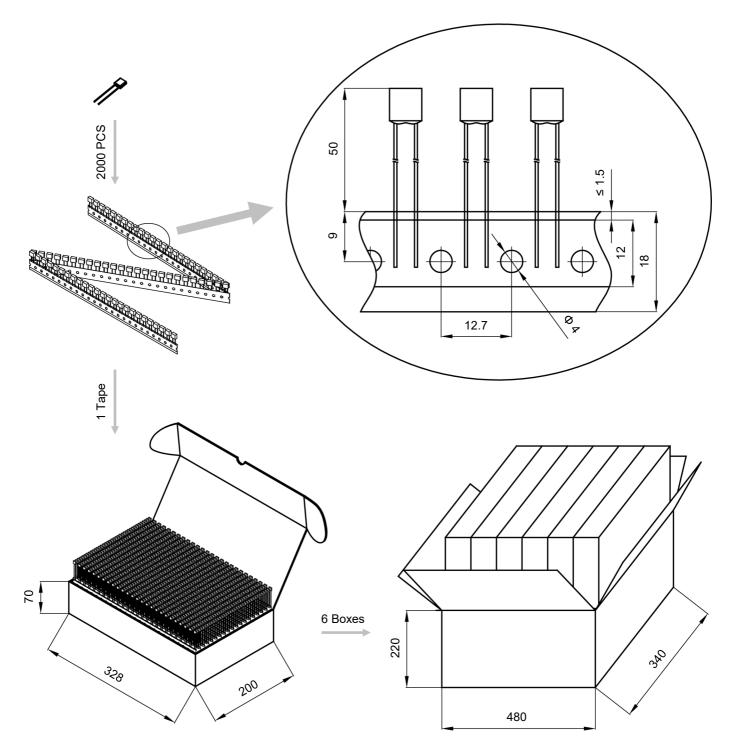

XM Series  $I_r: 3 A$ 



### **Usage**

- 1. When atmosphere pressure is from 80 kPa to 106 kPa, the related altitude shall be from 2000 meter to 500 meter.
- 2. Operating voltage less than rated voltage of ATCO, operating current less than rated current of ATCO.
- 3. Do not touch the ATCO body or lead wires directly when power is on, to avoid burn or electric shock.

# Replace

ATCO is a non-repairable product. For safety sake, it shall be replaced by an equivalent ATCO from the same manufacturer, and mounted in the same way.

### **Storage**

Do not store the ATCO at the high temp., high humidity or corrosive gas environment, avoid influencing the solder-ability of the lead wires, the product shall be used up within 1 year after receiving the goods.

#### Installation

Make Sure the Temp. of Installation Position.

- 1. It is recommended that a dummy ATCO with inbuilt thermo-couple shall be used to determine the proper temp.
- 2. The terminal product should be tested to ensure that potential abnormal conditions do not cause ambient temp. to exceed the  $T_m$  of the ATCO.
- 3. Mount the ATCO at the location where temp. rises evenly.

Installation position of mechanical performance requirements.

- 1. Do not locate the ATCO in a place where severe vibration always occurs.
- 2. Ensure that the lead wire is long enough, and avoid actions such as press, tensile or twist.
- 3. The seal or body of ATCO must not be damaged, burned or over heated.



# SETsafe | SET fuse

#### **Mechanical Connection**

#### Riveting

- 1. Choose small resistivity riveting material and be riveted.
- 2. A flexible lead or lead with low resistance should be used to rivet the ATCO.
- 3. Contact resistance should be minimal, Large contact resistance will lead to higher temp., ATCO Functioning in advance.

### **Soldering**

#### Hand-Soldering

- 1. Soldering should be carried out according to Table XM-1.
- 2. The thermal element of ATCO is fusible alloy with low melting point, which is jointed with ATCO lead wires. Improper soldering operation (too high soldering temp., too long soldering time, too short lead wire etc.) may transfer more heat to the thermal element and ATCO may open in advance.
- 3. When soldering conditions are more severe than those listed in Table XM-1, a heat sink fixture should be used between soldering point and ATCO body.
- 4. When soldering, please do not pull / push or twist ATCO body or lead wires.
- 5. After soldering, let it naturally cool for longer than 20 seconds. During cooling, never move the ATCO body or lead wires.

#### Wave Soldering


The wave soldering parameters as Table XM-2, for reference only, when ATCO is for practice use, you need to do some validation experiments. For example, using X-RAY to see the fusible alloy of ATCO whether damage after wave soldering.

TABLE XM-1 Hand-Soldering Time

Rated	Max	. Allowab	le Solderi	ing Time	for Differe	nt Lead \	Nire Leng	th (Fig.XI	M-1)	Max.
Functioning Temp.	Ls	Tir	Time		L <sub>s</sub> Time		Ls	Tir	ne	Soldering Temp.
$(T_{f})$	Length	Tinned Copper Wire	CP Wire	Length	Tinned Copper Wire	CP Wire	Length	Tinned Copper Wire	CP Wire	
(°C)	(mm)	(s)	(s)	(mm)	(s)	(s)	(mm)	(s)	(s)	(°C)
76 to 101	10	1 <sup>a</sup>	4	20	2	5	30	3	6	
102 to 115	10	1 <sup>a</sup>	4	20	2	5	30	3	6	
116 to 135	10	1ª	4	20	3	6	30	5	8	400
136 to 150	10	3	6	20	5	8	30	5	8	
151 to 230	10	4	7	20	6	9	30	7	10	

#### Note:

a: Auxiliary Heat Sink Fixture is Required to Avoid ATCO Cutting off Unexpectedly.

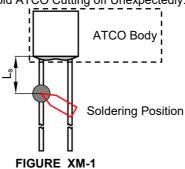




SETsafe SET fuse

#### TABLE XM-2 Wave Soldering Parameters Setting

Rated Functioning Temp. $(T_f)$	W	Max. Allowable F hen the Length of I (Fig.)	Preheating Time (t <sub>1</sub> )	Wave Soldering	Dwelling Time (t <sub>2</sub> )	Cooling Time (t <sub>3</sub> )		
	L <sub>s</sub> Length	Preheating Temp.	L <sub>s</sub> Length	Preheating Temp.		Temp.		
(°C)	(mm)	(°C)	(mm)	(°C)	(s)	(°C)	(s)	(s)
76 to 130	Recommend Hand-Soldering							
131 to 150	20	80	30	90	< 60	≤ 260	≤ 3	≤ 10
151 to 230	20	90	30	100	< 60	≤ 260	≤ 3	≤ 10

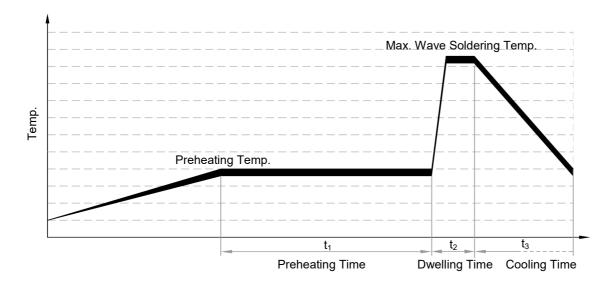

### **Lead Wire Forming**

- If lead wire has to be bent, please pay attention to the distance between body and bending point. Refer to Table XM-3.
- When bending leads, please use pincher or similar tools to fix the product as shown in Fig.XM-2, to avoid damaging the product.
- 3. During forming and mounting, lead wire should not be cut, nicked, bent sharply, to avoid breaking the product.
- Tangential forces on the leads must be avoided (i.e. pushing or pulling on the leads at angle to ATCO body) as such forces may damage the seal of ATCO.

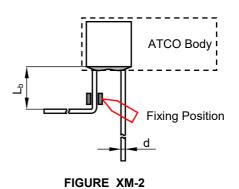


TABLE XM-3 Distance between Body and Bending Point

d	(mm)	≤ 1.0	1.0 to 1.2	> 1.2
L <sub>b</sub>	(mm)	≥ 3	≥ 5	≥ 10