


#### **Description**




Surge Protection Device (SPD) for PV System is a device that provides surge protection for PV system. It plays a big role for preventing transient surge caused by direct or induced lightning strikes or other instantaneous overvoltage surges. It is suitable for photovoltaic power generation, wind power generation and other DC systems. When there is a sudden power spike in an electrical circuit or communication line due to external interference, the current or voltage is high, the Surge Protective Device (SPD) can conduct and discharge in a very short time to prevent the power surge damaging other parts of the circuit.

SETsafe | SETfuse's Surge Protective Device SD25TxxxL312PV series are mainly composed of varistor (MOV), pluggable module, base and internal and external electrode. Nominal discharge current: 25kA, Maximum continuous operating voltage: (600 ~ 1500)VDC, certification: UL, cUL, TUV, CE, complied with RoHS and REACH.

### **Dimensions (mm)**

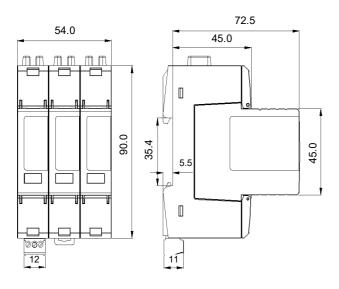

# **Schematics**

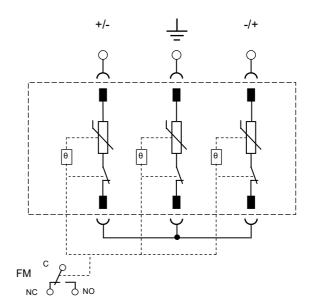

#### **Features**


- With Remote Signal Contact and Failure Indication
- Pluggable Module for Easy Replacement
- Internal Thermal Protection, Fail-safe

## **Applications**

- Photovoltaic Inverter
- Distribution Power Unit (DPU)
- DC Lightning Protection Box
- DC Power Supply
- Energy Storage Converter

+86-592-571-5838 www.SETfuse.com www.SETsafe.com E-mail:sales@SETfuse.com

# **Wiring Diagram**

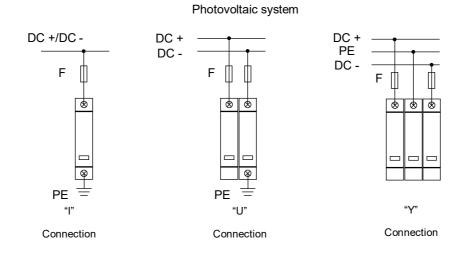

# **Specifications**


Features	Specifications	
Degrees of Protection Provided	IP20	
Wiring Ability	(1.5 ~ 25) mm²( Flexible) / 35 mm²( Rigid)	
Installation 35 mm DIN rail		
Alarm	Remote + Indicator	
Operating State / Fault Indication	Green ( OK ) / Red ( Fault )	
Remote Indication Contacts	AC: 250 V / 0.5 A , 125 V / 1.0 A	
	DC: 250 V / 0.1 A , 125 V / 0.2 A , 75 V / 0.5 A	
Cross-section of Remote Indication Conductors	1.5 mm <sup>2</sup>	
Short Current Rating I <sub>SCPV</sub>	25 kA	
According to Standard	UL 1449, IEC/ EN 61643-31	
Altitude	-500 ~ 5000 m	
Operational Temperature Range	(-40 ~ 85) °C	

## **Specifications**

Model	Max. Continuous Operating Voltage	Impulse Discharge Current (10/350 µs)	Nominal Discharge Current (8/20 µs)	Max. Discharge Current (8/20 μs)	Voltage Protection Level	Modes of Protection	Age	ncy
	( <i>U</i> <sub>c</sub> )	(I <sub>imp</sub> )	( <i>I</i> <sub>n</sub> )	(I <sub>max</sub> )	( <i>U</i> <sub>p</sub> )		TUV	UL
SD25T600L312PV	660 VDC	12.5 kA	25 kA	50 kA	3.0 kV		0	•
SD25T800L312PV	900 VDC	11.0 kA	25 kA	50 kA	4.0 kV	DC+/DC- —	0	•
SD25T1000L312PV	1100 VDC	10.0 kA	25 kA	50 kA	4.2 kV	PE,	•	•
SD25T1200L312PV	1200 VDC	7.5 kA	25 kA	50 kA	5.0 kV	DC+ — DC-	•	•
SD25T1500L312PV	1500 VDC	5.0 kA	25 kA	50 kA	6.0 kV		•	•

<sup>&</sup>quot;●" indicates that the product has been certified, and "○" indicates that the product has not been certified.

## **Packaging Imformation**

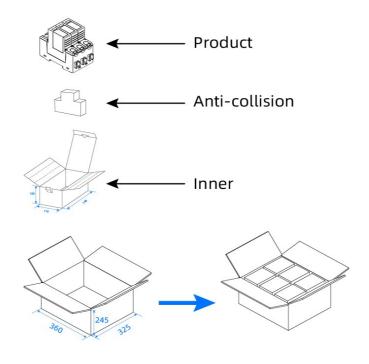


Item	Inner	carton
Package Size (mm)	98x 80 x 76	420 × 315 × 175
Quantity (PCS)	2	24



## **Agency Information**

Agency	Information	Standards	NO.	Category
<b>71</b> °	UL	UL 1449	E322662	Type 4CA
c <b>91</b> °	CUL	CSA C22.2 NO.269.5	E322662	Type 4CA
TÜVRheinland	TUV	IEC/EN 61643-31	R 50441567	Class II and Class I
CE	CE	IEC/EN 61643-31	AN 5053554	Class II and Class I

#### **Part Numbering System**

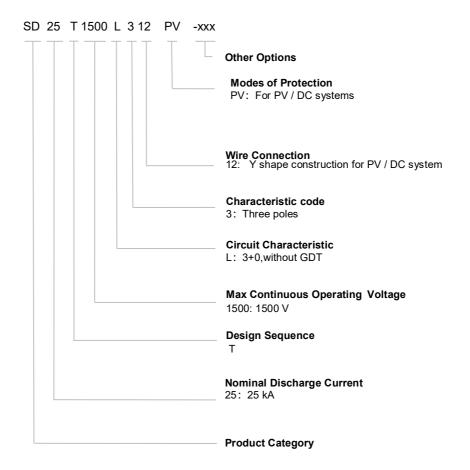

#### Reminder:

Part numbering system in the datasheet is only for selecting correct parameter and product features. Before pl aing order, please contact us for specifications and use the part number and product code in the specifications to place order to ensure the part is correct. Product code is the unique indentification.

# SPD

## **Surge Protective Device**

#### Overvoltage

Electricity is an essential part of modern human production and life. But power facilities are threatened by internal and external overvoltages. Power system overvoltage mainly includes:

Transient overvoltage of atmospheric origin: Lightning strikes instantly generate high energy, generating surge currents up to hundreds of kA, and lightning wave can invade along power lines, causing damage to power facilities and electrical equipment

Transient overvoltage due to switching: Switching operations of a power utility may cause overvoltage. **Temporary overvoltage:** A long duration (second level) temporary overvoltage (asymmetric ground fault) or harmonious overvoltage.


### Surge Voltage Caused by Lightning

Electrical and electronic system are subject to damage from a lighting electromagnetic impulse (LEMP). Therefore SPM need to be provided avoid failure of internal system. LEMP may caused by direct, near and far lightning strikes. According to the relevant research, lightning strikes within a certain distance may cause dangerous overvoltage on the cable, endangering the equipment connected to it.


## **Damage Due to Lighting**

The lighting can cause three basic type of damage:

- -D1: injury to living beings by electric shock;
- -D2: physical damage (fire, explosion, mechanical destruction, chemical release) due to lighting current effects, including sparking;
- -D3: failure of internal systems due to LEMP

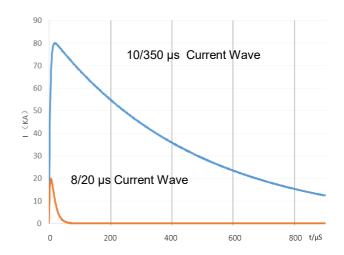

Standard lightning test wave

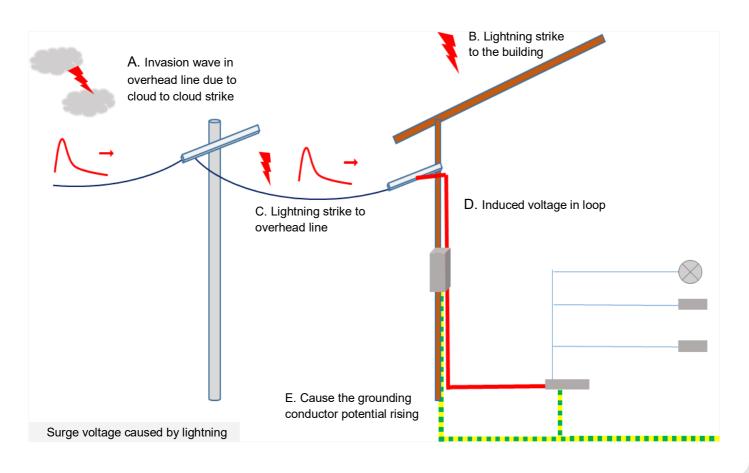



# SETsafe | SET fuse

## Glossary

Item	Description
	Votage Protection Level
$U_{p}$	Maximum voltage to be expected at the SPD terminals due to an impulse stress with defined voltage steepness and an impulse stress with a discharge current with given amplitude and wave shape.
	8/20 Current Impulse
8/20 μs	Current impulse with a nominal virtual front time of 8 µs and a nominal time to half-value of 20 µs.
	— (IEC/EN 61643-11
	1.2/50 Voltage Impulse
1.2/50 μs	Voltage impulse with a nominal virtlual front time of 1.2 μs and a nominal time to half-value of 50 μs.
	— (IEC/EN 61643-11
	Maximum Continuous Operating Voltage
<b>U</b> c	Maximum r.m.s. voltage, which may be continuously applied to the SPD's mode of protection.
	Nominal Discharge Current
<i>I</i> <sub>n</sub>	Crest value of the current through the SPD having a current waveshape of 8/20 µs.
	— (IEC/EN 61643-11
	Ilmpulse Discharge Current for Class I Test
<b>I</b> imp	Crest value of a discharge current through the SPD with specified charge transfer Q and specified energy W/R in the specified time.
	Maximum Discharge Current
_	Crest value of a current through the SPD having an 8/20 µs waveshape and magnitude according to the
<b>I</b> <sub>max</sub>	manufacturers specification. $I_{\text{max}}$ is equal to or greater than $I_{\text{n}}$ .
	— (IEC/EN 61643-11
	Modes of Protection
Modes of	An intended current path, between terminals that contains protective components, e.g. line-to-line, line-to-earth,
Protection	line-to-neutral, neutral-to-earth.
	— (IEC/EN 61643-11
	Degrees of Protection of enclosure
IP	Classification preceded by the symbol IP indicating the extent of protection provided by an enclosure against access to hazardous parts, against ingress of solid foreign objects and possibly harmful ingress of water.
	— (IEC 60529



### **Usage**

- 1. The voltage applied continuously to the SPD must not exceed its maximum continuous operating voltage  $U_c$ .
- 2. When atmosphere press is from 54 kPa to 106 kPa, the related altitude shall be from 5000 m to 500 m.
- 3. Do not touch the product body or wires directly when power is on, to avoid electric shock.

## Replacement

As SPD is a non-repairable product, for safety sake, please use the same type of SPD for replacement.

## **Storage**

Do not store SPD at high temperature, high humidity or corrosive gas environment. Use them up within 2 years after receiving the goods.

#### Installation

- 1. Installation and startup may only be carried out by qualified personnel. The relevant country-specific regulations must be observed.
- 2. Check the device for external damage before installation. If the device is defective, it must not be used.
- 3. Pay attention to risk of electric shock. Please cutoff all electrical power before installation or service.
- 4. Lay the output cables to the surge protective devices (SPDs) as short as possible, without loops.
- 5. Please install proper backup protection devices in front of SPD.
- 6. Do not apply mechanical stress to the SPD body during or after the installation.

#### **Maintenance**

- 1. Check SPD status according to instructions before and after the thunderstorm season each year.
- 2. If the indicator of "failure state" appears, the SPD is damaged. Replace the SPD with same type.
- 3. Ensure electrical connections and mountings are correct before energizing the circuit.
- 4. SPD's quality is well controlled and strictly inspected before delivery. If non-functional ones are found during operation, please contact us early enough.